



PO Box 6824  
SILVERWATER NSW 2128  
Unit 3, 4-6 Junction Street  
AUBURN NSW 2144  
Ph: 13 35 36  
Fax: (02) 9647 2189

## Ensysnex Australasia

ABN: 53 102 221 965

Email: info@ensysnex.com.au

# TOP GUN Gel Applicator

### Operating instructions

1. Remove the **Tip Protector Cup** (18) by twisting anti-clockwise half a turn
2. Attach desired **Applicator Tip** (19) by inserting and twisting clockwise half a turn.
3. Turn **Regulator Dial** (4) to desired output volume (see table below)

### Approximate needle dosage (grams)

Position	No. 15 (19.1)	No. 18 (19.2)
0	0.000	0.000
1	0.050	0.016
2	0.140	0.032
3	0.230	0.067
4	0.300	0.120
5	0.400	0.160

*Note. Output volume will vary with different gels depending on density and thickness*

4. Insert **30g Gel Cartridge** by inserting from the top of the gun making sure to push the Gel Cartridge firmly forward into the gun body, then release back on to trigger head.
5. Insert **Plunger** (20) into Gel Cartridge and gently push until gel reaches the end of the Applicator Tip. Remove Plunger.
6. Pull **Trigger** (3) and hold until gel ceases to dispense, at this point the Regulator Dial may need readjusting to correct desired output.
7. NB. Trigger needs only to be depressed once per application.

*Be sure to clean and maintain your gel gun regularly for optimal performance, it is recommended that the **Cleaning Rod** (19.4) be used to remove any gel remaining in Applicator Tips after every use. Periodically remove the **Safety Lock Adapter** (17) to clean out excess gel, or whenever switching to a different gel.*

